




IGNW-SKR-01

IGNW-SPN-01

IGNW-SNW-01

Silent Nano Diffuser

Maintenance manual

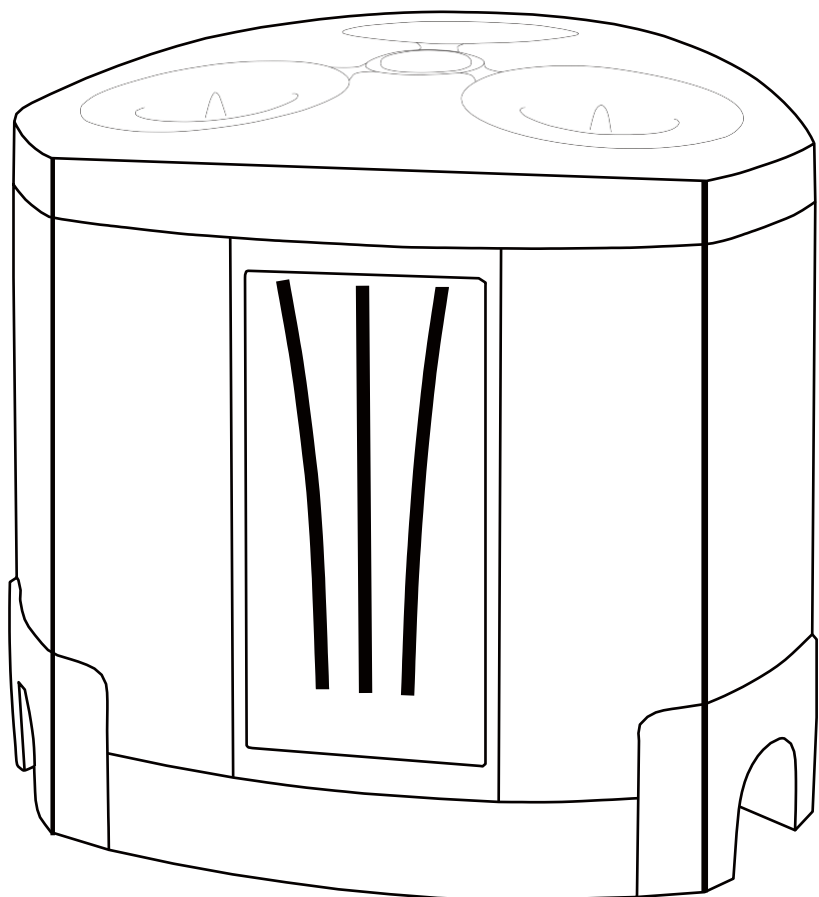

Thank you for your purchase of the Silent Nano diffuser. Regular cleaning to make your product comfortable. After reading, keep it where you can see it at any time.

How to care for your products

■ If the effect of deodorant and fragrance has become weaker, the sounds from the outlet “Shuushuu”, please clean inside and around the outlet, with soft materials like as samples. You can use it stably by cleaning it regularly.




Unplug the adapter from the outlet when you clean

If you work with the power on, you may be injured by internal high voltage part.




Don't touch the internal needle when cleaning. If you touch it, may cause a malfunction.

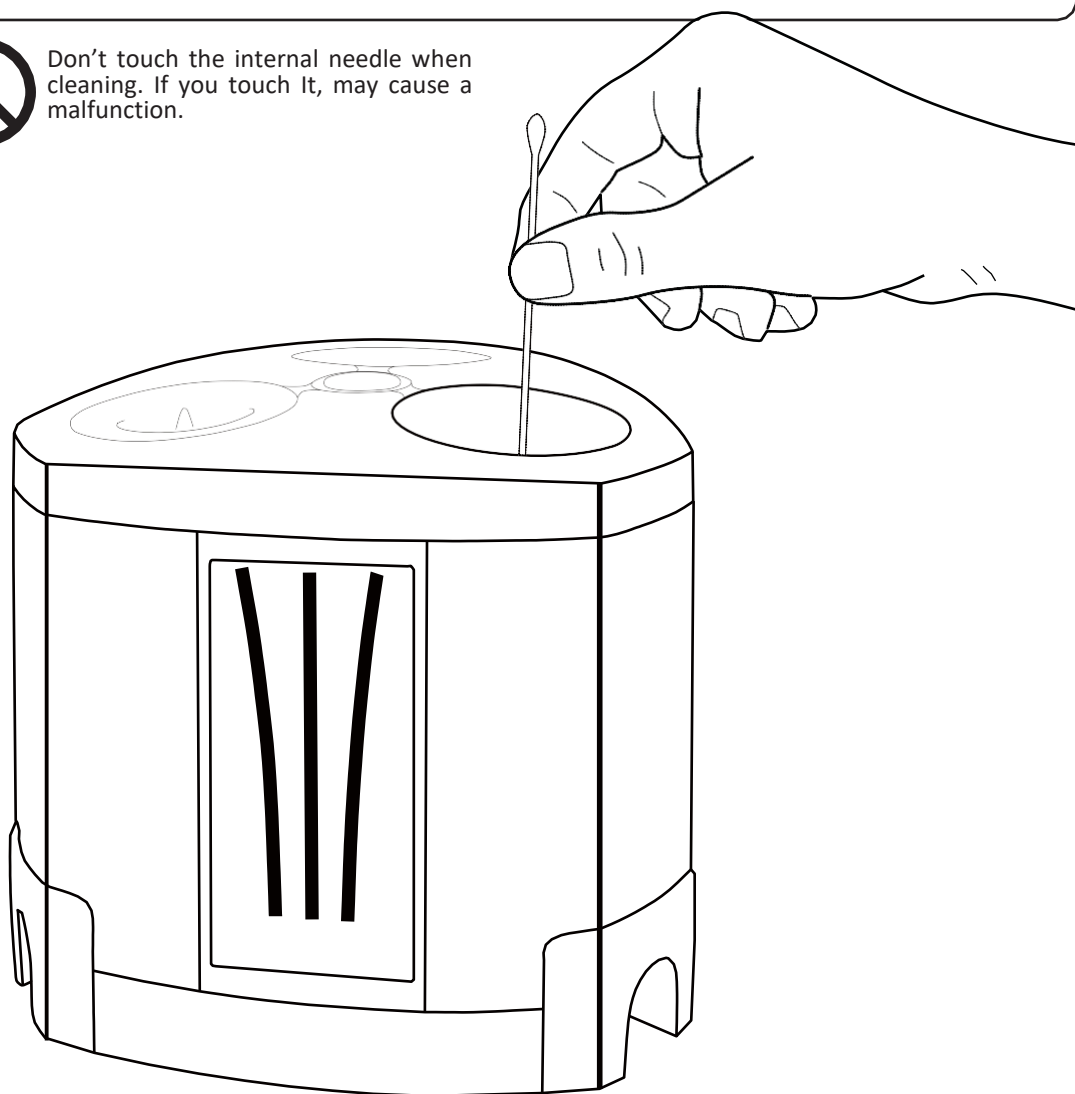

..... ■ Unplug the power supply, then take off the outlet cover, cartridge tray and cartridge (see page7~8 in the Product instruction manual)
Please clean along the circumference of the ion engine with a cotton swab.
Please note that dust and garbage may fall.

※When cleaning, it is more effective to soak the cotton swab in functional water.

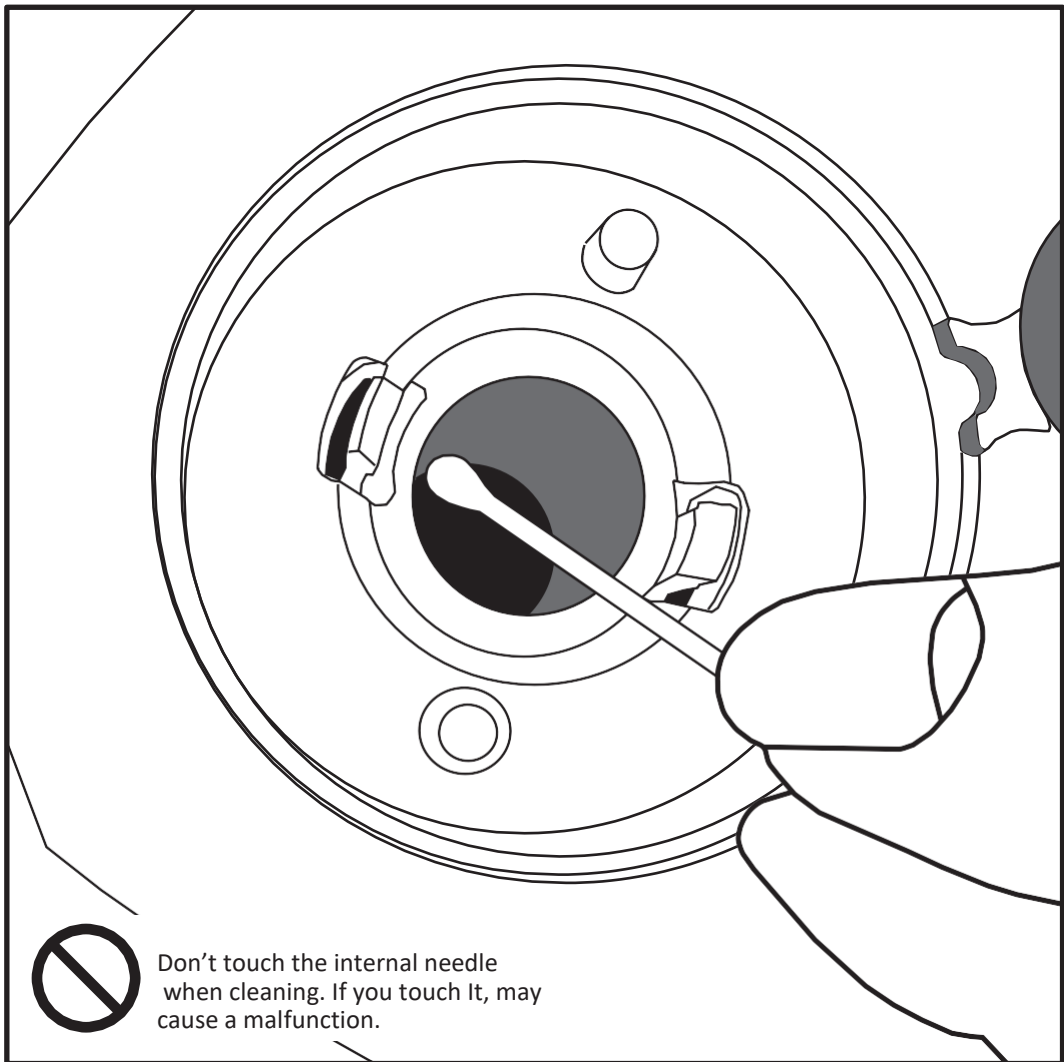


Unplug the adapter from the outlet when you clean

If you work with the power on, you may be injured by internal high voltage part.



■ When you finish cleaning the upper side, turn the body upside down and clean the lower side — the metal part — along the circumference with a cotton swab bent to L-shaped.

※ When cleaning, it is more effective to soak the cotton swab in functional water.

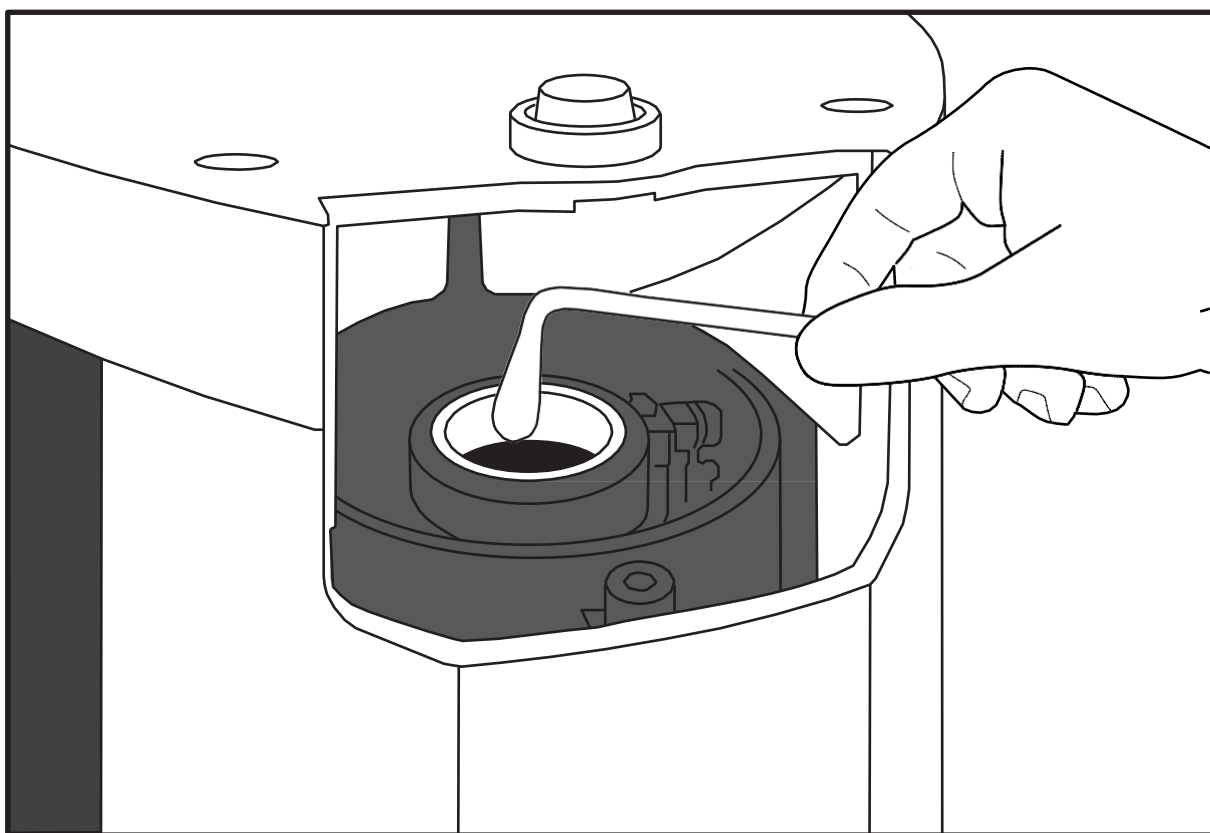

Don't touch the internal needle when cleaning. If you touch it, may cause a malfunction.



Unplug the adapter from the outlet when you clean

If you work with the power on, you may be injured by internal high voltage part.

